


ADAPTER EXTENSION PIECE ANSCHLUSSSTÜCK VERLÄNGERUNG

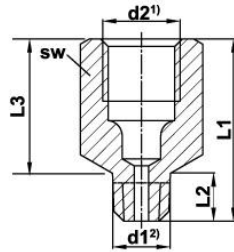

Art. Nr.	Fig.	d1	d2	L1	L2	L3	sw	Ø
FI.526.M6-M8X1-18	1	M 6 x 1	M 8 x 1	18	8	10	11	4
FI.526.M8X1-M8X1-18	1	M 8 x 1	M 8 x 1	18	8	10	11	4
FI.526.M8X1-M8X1-32	1	M 8 x 1	M 8 x 1	32	22	10	11	4
FI.526.M8X1-M8X1-62,5	1	M 8 x 1	M 8 x 1	62,5	52,5	10	11	4
FI.526.M8X1-M10X1-23	2	M 8 x 1	M 10 x 1	23	12	11	13	6
FI.526.M10X1-M8X1-18	1	M10 x 1	M 8 x 1	18	8	10	11	4
FI.526.M10X1-M10X1-18	2	M10 x 1	M 10 x 1	18	7	11	13	6
FI.526.M10X1-M10X1-23 * inox	2	M10 x 1	M 10 x 1	23	12	11	13	6
FI.526.M10X1-M10X1-35	2	M10 x 1	M 10 x 1	35	24	11	13	6
FI.526.M10X1-M10X1-40	2	M10 x 1	M 10 x 1	40	29	11	13	6
FI.526.M10X1-M10X1-50	2	M10 x 1	M 10 x 1	50	39	11	13	6
FI.526.R02-M10X1-18	2	R 1/8 BSP	M 10 x 1	18	7	11	13	6
FI.526.R02-R02-18	2	R 1/8 BSP	Rp 1/8 BSP	18	7	11	13	6
FI.526.R02-M8X1-18	2	R 1/8 BSP	M8 x 1	18	7	11	13	4
FI.526.R02-R02-23 * inox	2	R 1/8 BSP	Rp 1/8 BSP	23	12	11	13	6
FI.526.R02-R02-30		R 1/8 BSP	Rp 1/8 BSP	30	18	12	13	
FI.526.R02-R02-35	2	R 1/8 BSP	Rp 1/8 BSP	35	23	12	13	6
FI.526.R02-R02-41		R 1/8 BSP	Rp 1/8 BSP	41	29	12	13	
FI.526.R02-R02-45		R 1/8 BSP	Rp 1/8 BSP	45	33	12	13	
FI.526.R02-R02-50	2	R 1/8 BSP	Rp 1/8 BSP	50	38	12	13	6
FI.526.R02-R04-22		R 1/8 BSP	Rp 1/4 BSP	22	8	14	17	
FI.526-R04-M10X1-20	2	R 1/4 BSP	M 10 x 1	20	9	11	17	6
FI.526-R04-R02-20	2	R 1/4 BSP	Rp 1/8 BSP	20	9	11	17	6
FI.526.R04-R06-27		R 1/4 BSP	Rp 3/8 BSP	27	11	16	22	
FI.526.R04-R04-25		R 1/4 BSP	Rp 1/4 BSP	25	17	8	17	



FI.526.R04-R04-85		R 1/4 BSP	Rp 1/4 BSP	85	71	14	17	
FI.526.R02NPT-R02NPT-20		1/8 NPT	1/8 NPT	20	9	11	1/2	
FI.526.R02NPT-R02NPT-30		1/8 NPT	1/8 NPT	30	18	12	1/2	
FI.526.R04UNF-R02-23		1/4-28 UNF	1/8 BSP	23	12	11	1/2	

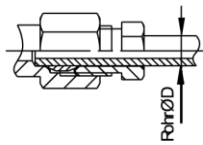


fig. 1

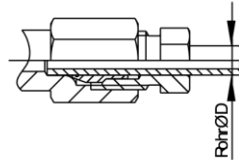


fig. 2

* *inox*